

## Replacing the Separating Knife

If the separating knife becomes dull, replace it with the included replacement knife.



**CAUTION**

**Be sure to perform operations as specified by the instructions, and never touch any area not specified in the instructions.**


Otherwise sudden movement of the machine may cause injury.



**CAUTION**

**Do not touch the tip of the separating knife.**

Doing so may result in injury.

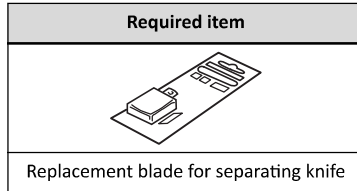

### Procedure

1. Remove any media.
2. Press [MENU].
3. Press [▼] several times to display the screen shown below.



4. Press [▶] once, and then press [▼] several times to display the screen shown below.



5. Press [▶] once, and then press [▼] several times to display the screen shown below.



 
6. Press [ENTER].

The separating knife moves to a position where replacement is possible.

7. When the following screen is displayed, open the front cover.




Preparation is complete once the following screen is displayed.



8. Remove the separating knife.


- (1) Loosen the screw until it slips out.
- (2) Grasp the screw portion, and slowly pull in the direction of the arrow.

When doing this, do not pull it back toward you.

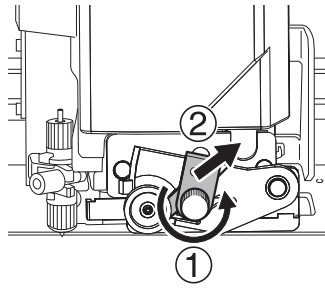


**9. Install a new knife.**

Slide the knife to align it with the groove (①). The knife is secured in place by the magnet(②).

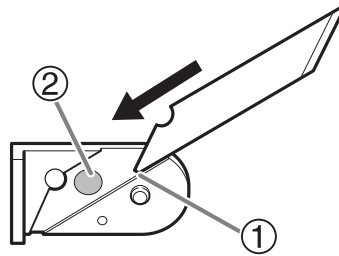


**10. Slowly insert the knife into the groove.**

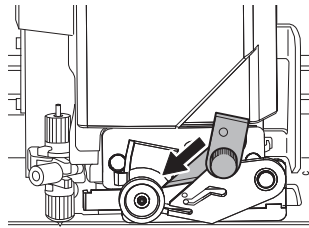

**11. Tighten the screw.**

Take care to ensure that the knife does not slip out of position at this time.

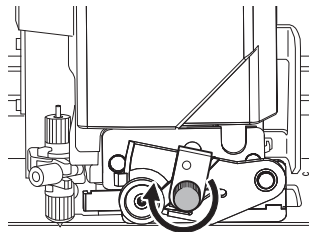

**12. Close the front cover.**

**13. Press [ENTER].**

When the following screen is displayed again, the blade replacement is finished.



**14. Press [MENU] to go back to the original screen.**